




開啟電源，等待畫面出現民政事務總署徽號

Switch on the power supply and wait for the departmental logo of the Home Affairs Department

觸控屏幕任何位置進入影音系統啟動頁面

Touch anywhere on the screen to enter the AV system

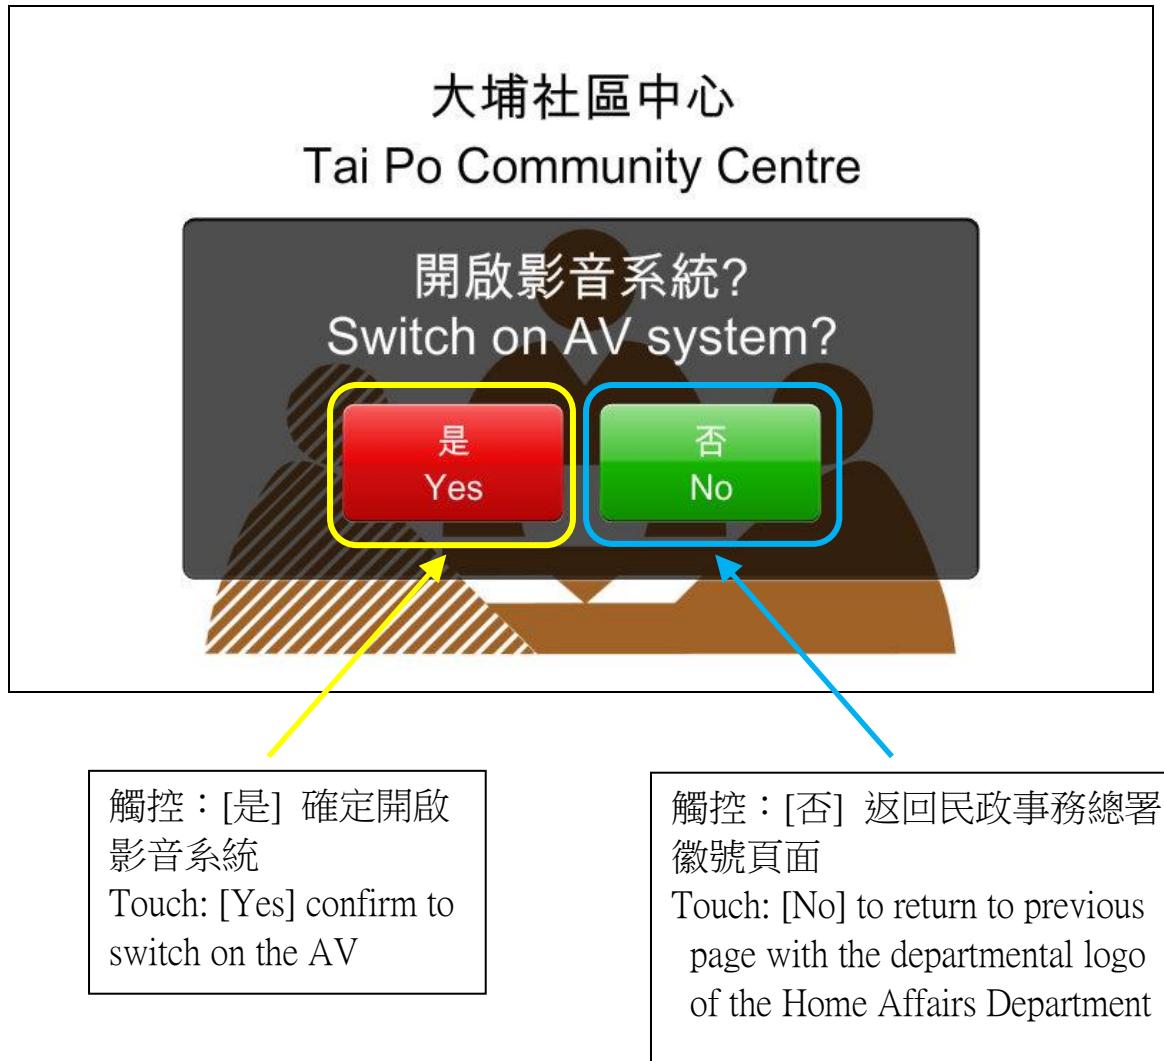




影音系統開啟時間：兩分鐘

AV system switching on time: Two minutes




待命中：表示使用者可以開始使用影音系統的四個功能頁面，
〔影音輸入〕，〔場景音效〕，〔咪高峰選擇〕及〔喇叭輸出〕
the user can start using the four functional icons of the AV system, including the
[Input], [Scene Effect], [Microphone Selection] and [Speaker Output]

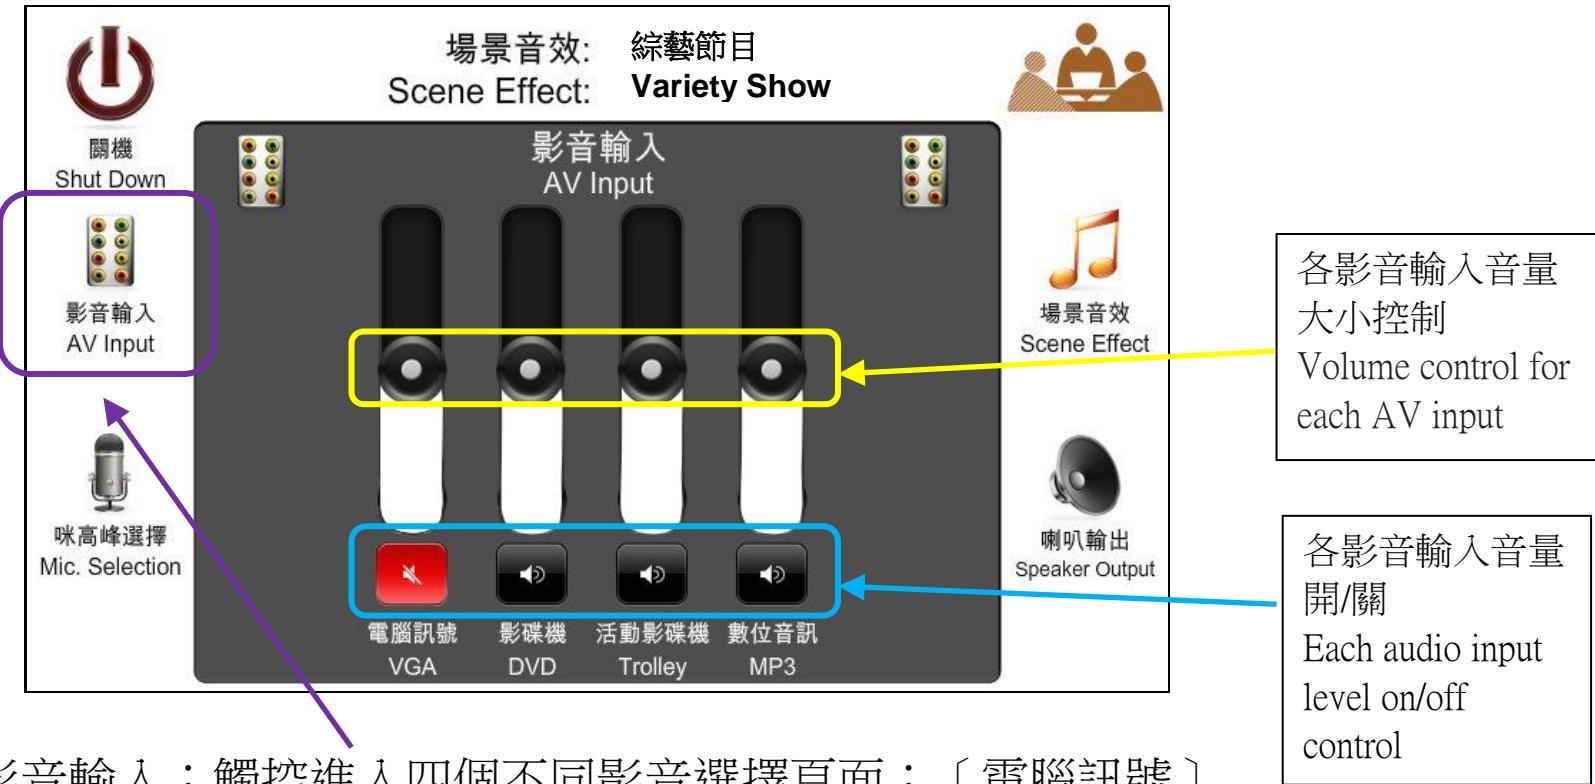


影音輸入：觸控進入四個不同影音選擇頁面：〔電腦訊號〕
〔影碟機〕，〔活動影碟機〕，〔數位音訊〕

AV Input: Touch into four different AV selection page: [VGA], [DVD], [Trolley], [MP3]

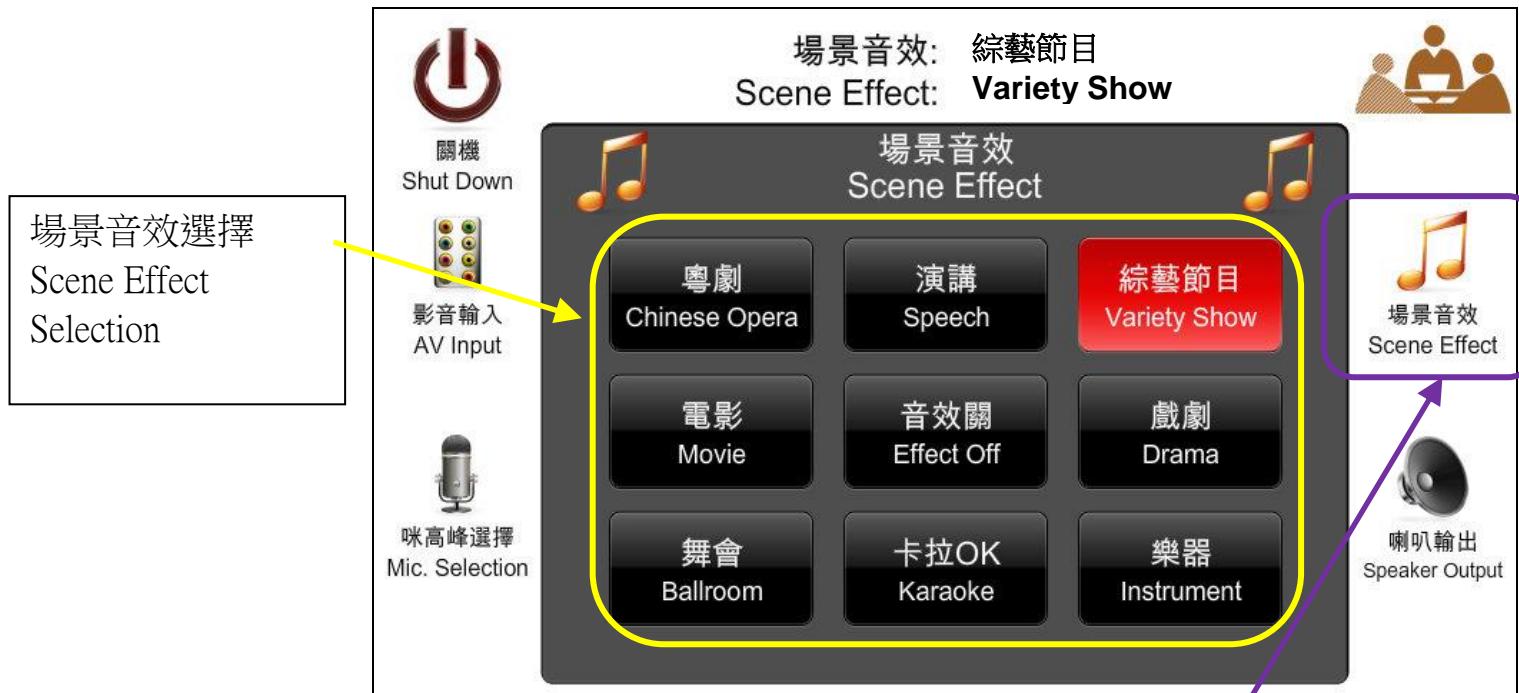

場景音效：觸控進入九個不同場景音效

Scene Effect: Touch into each panel to select from the nine different scene effects

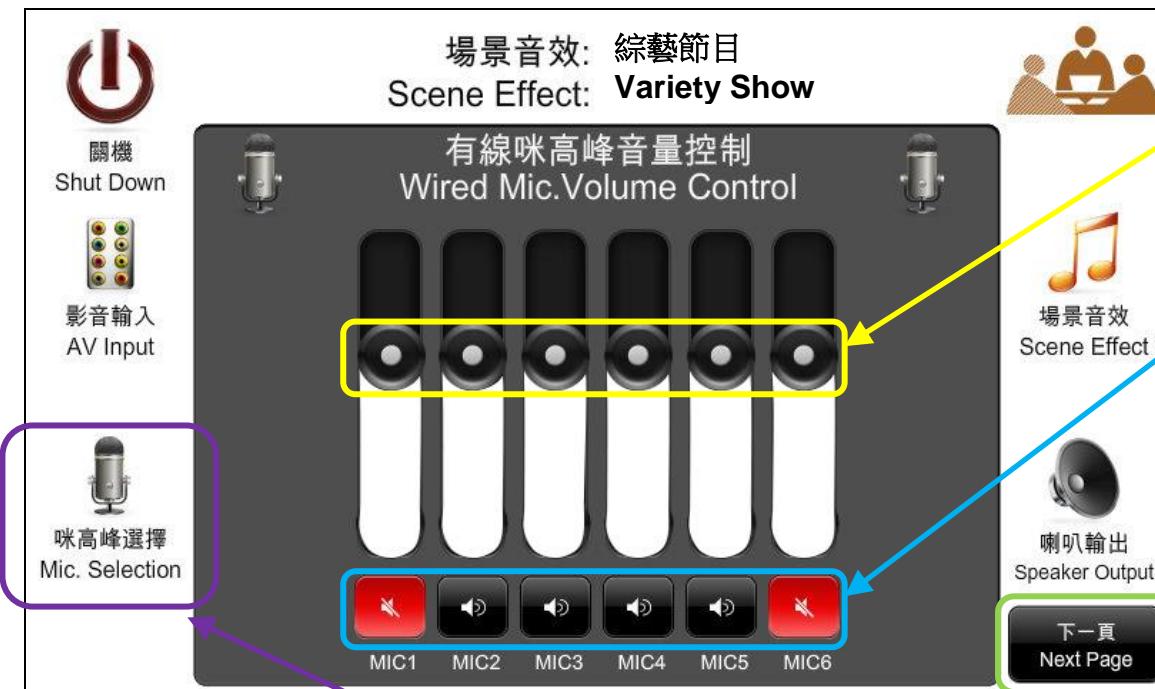


有線咪高峰輸入音量大小控制
Wired microphone input volume control

有線咪高峰輸入音量開/關控制
Wired microphone input level on/off control

觸控下一頁進入無線咪高峰輸入音量開關控制
Touch Next Page to enter Wireless microphone volume


咪高峰選擇：觸控進入有線及無線咪高峰控制頁面

Microphone Selection: Touch into wired and wireless microphone control page

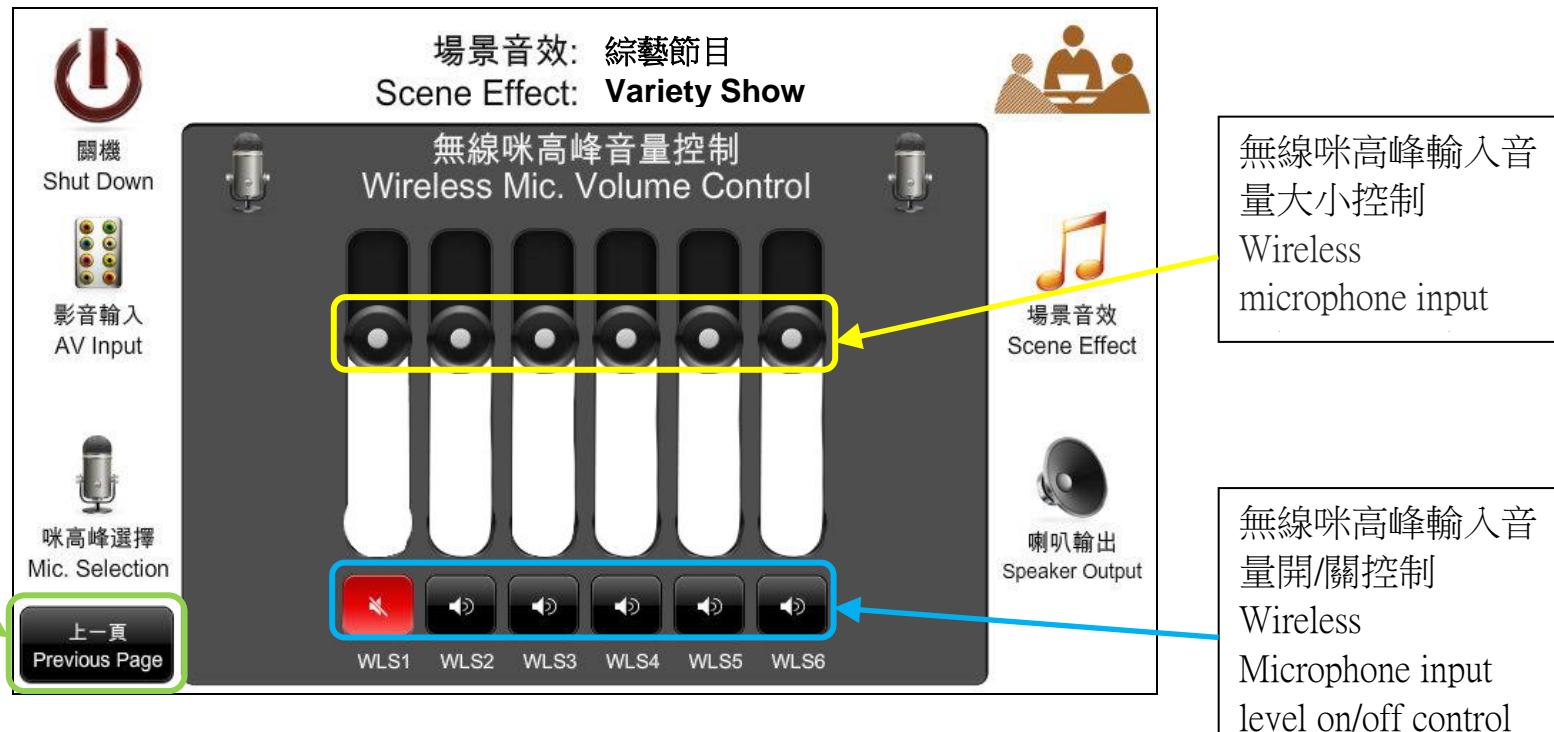


無線咪高峰音量控制頁面


Wireless microphone volume control page

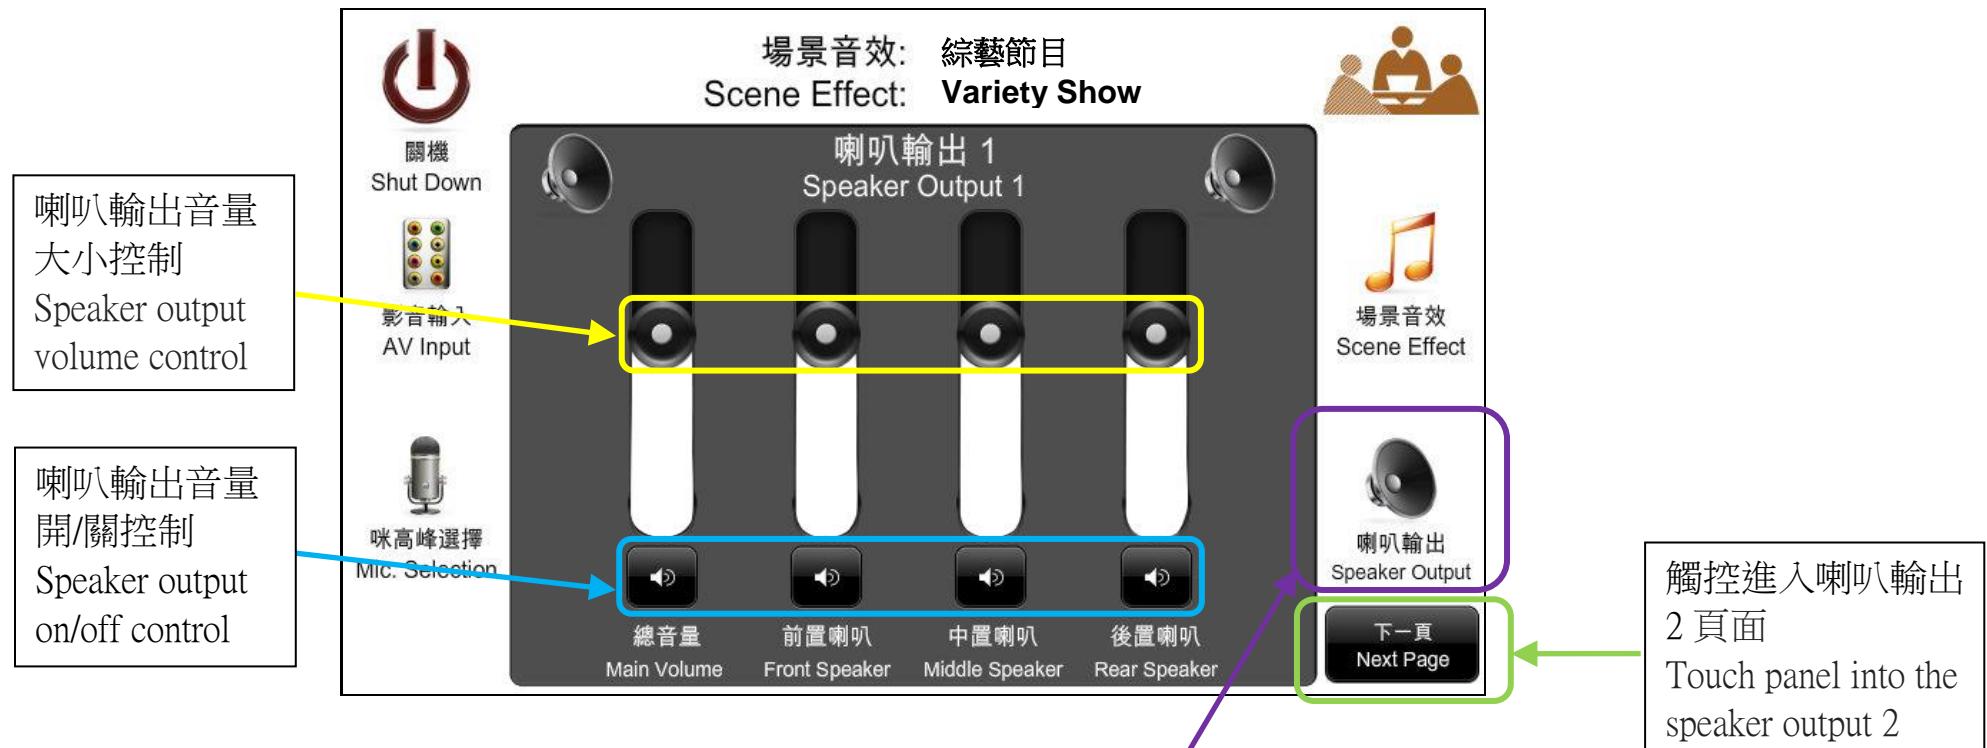

喇叭輸出：觸控進入喇叭輸出 1 或喇叭輸出 2 頁面

Speaker Output: Touch to enter the speaker output 1 page or speaker output 2 of page

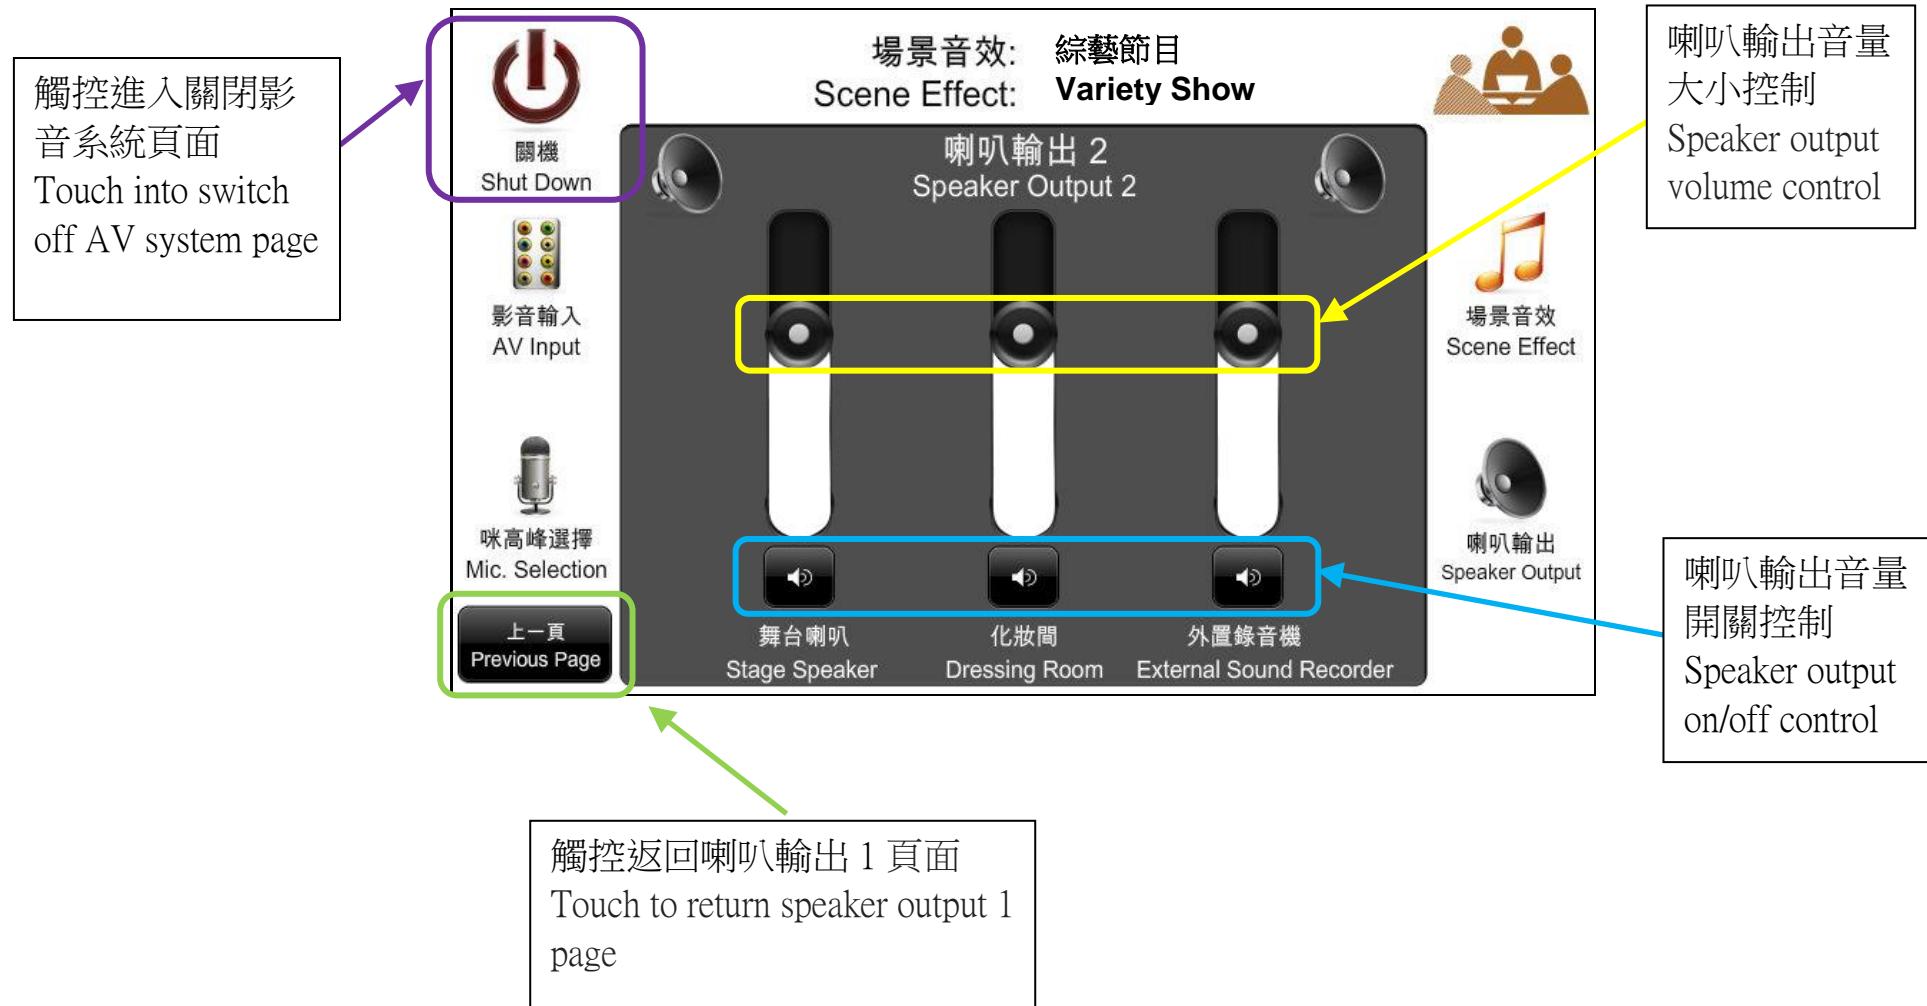

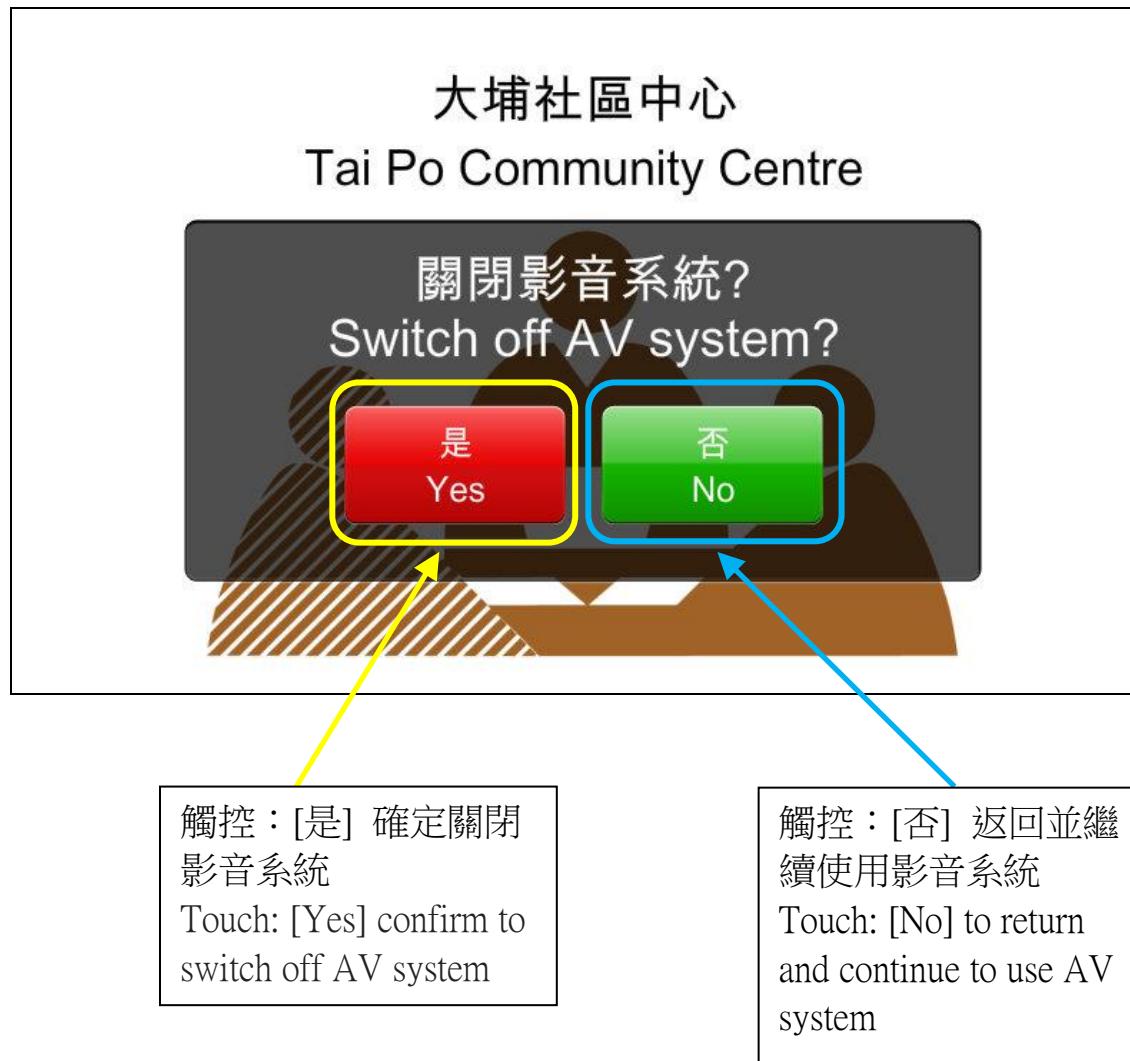



影音系統關閉後會出現民政事務總署徽號

The departmental logo of the Home Affairs Department will appear
after the AV system shuts down



可以關閉電源
Switch off the power supply if required